 


Quick start guide for the AmbiCube for the initial installation



1.

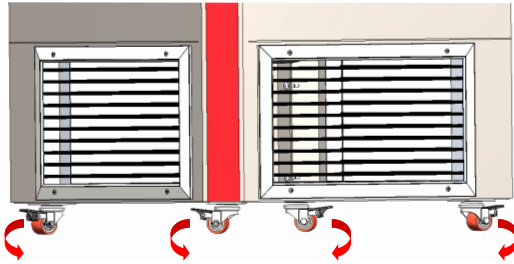


Bring the device into the required position.
Close all parking brakes and turn inward.


NOTE:

The device should be positioned as centrally as possible within the room, so that the air exchange can proceed evenly. Should this not be possible and one side of the device is positioned against a wall, the slats of the air inlet on this side must be closed manually as much as possible.


2.

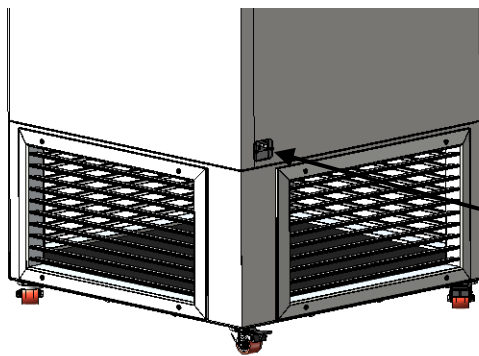

Plug the device into the power supply as follows:
Plug the power supply cable into the power connector of the device.
Plug the power supply cable into the power socket.

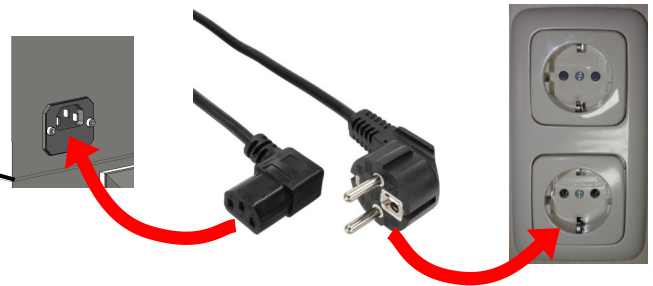

3.

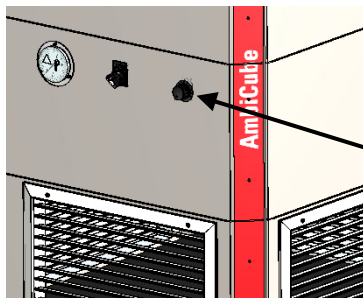

Which setting mode should be selected on the knob?

This actually depends on the ambient volume and the number of air changes per hour.

For this reason, first specify the room volume by measuring the length, width and height of the room.



The appropriate setting mode for the room can then be selected by referring to the table at the bottom of the back panel.

NOTE:

In general, it is recommended that the room air is changed 4 to 6 times per hour to ensure the best cleaning effect.



This means that the entire room air is filtered 4 to 6 times per hour.

4.

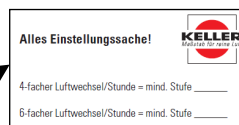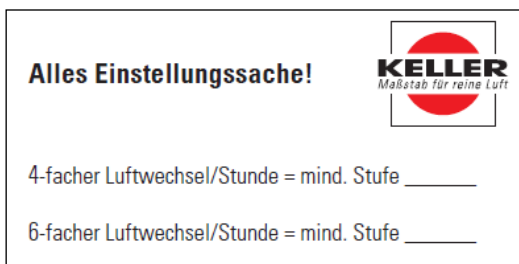

Place the provided sticker above the control knob on the front of the device. Note the settings you have just determined for 4 and 6 air changes per hour on the sticker. This will enable each person to set the device correctly.

5.

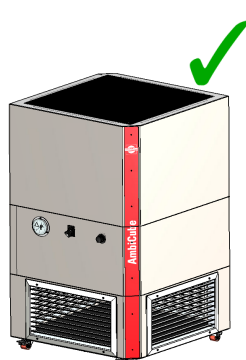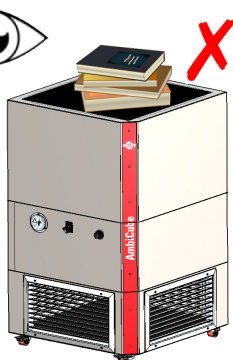


NOTE!

Always make sure that no objects are placed on the discharge grille on the top of the device, especially before switching it on.

No liquid or moisture may get into the device, as this will destroy the filter elements.

Quick start guide for the AmbiCube for the initial installation

6.

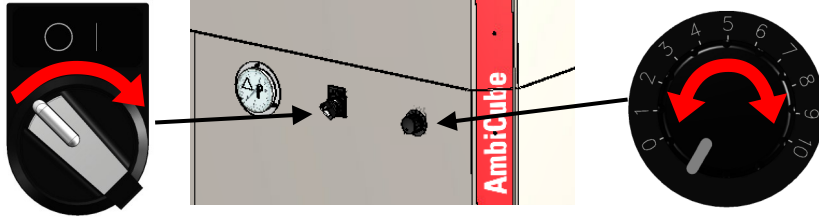

Switch on the device at the on/off button.
Set the knob to the value determined using the table below.

7.



Now fix the supplied sticker prominently on your entrance or room door, so that customers or employees know directly that a room air purifier ensures safety and clean air.
Alternatively, stick it directly on the device so that everyone knows it is a room air purifier.

NOTE:
The device should be in operation whenever people are inside the room or the room is not in use for a short time only.
The running time of the device is not limited.
However, the device should be switched off in the evening by the last person to leave the room.

8.



[www. https://www.keller-lufttechnik.de/ambicube-doku](https://www.keller-lufttechnik.de/ambicube-doku)

Place the supplied sticker on the front door or room door so that customers or employees immediately know that a room air purifier provides safety and clean air.

Table for setting the knob

Spatial volume in m ³	4x air purification per hour (m ³ /h)	Number of AmbiCubes required	Setting level per AmbiCube	6x air purification per hour (m ³ /h)	Number of AmbiCubes required	Setting level per AmbiCube
50	200	1	3	300	1	3,5
100	400	1	4	600	1	5
150	600	1	5	900	1	6,5
200	800	1	6	1200	2	5
250	1000	1	7	1500	2	5,75
300	1200	2	5	1800	2	6,5
350	1400	2	5,5	2100	3	5,5
400	1600	2	6	2400	3	6
450	1800	2	6,5	2700	3	6,5
500	2000	2	7	3000	3	7
550	2200	3	5,75	3300	4	6
600	2400	3	6	3600	4	6,5